



← Replacement
Metal Window
Clips



← Stock Window Clips

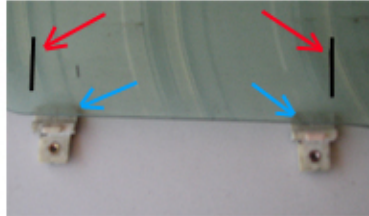

Refer to your VX shop manual to remove your driver and passenger windows. Lay the glass flat (inside facing up) Make two marks on the glass with a sharpie...mark the outside edge of each stock tab location (shown in red) using a razor scraper remove whats left of the stock plastic tabs and glue (marked in blue)

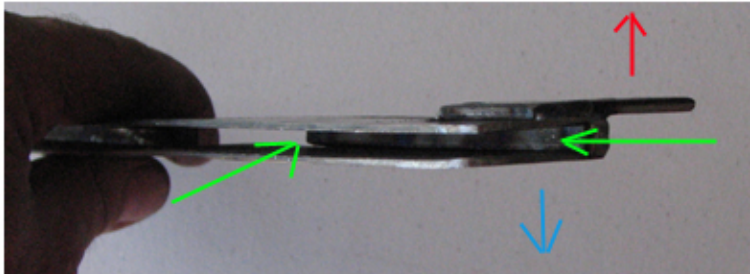

Looking down into the new clips notice which side the mounting tab is on...(RED toward outside of door) (BLUE toward door panel) (GREEN fill with glue)

There are many types of glue you can use I used an industrial strength hot glue on mine and is holding good after all this time.

Using your sharpie marks on the glass as a guide Fill your new mounting brackets with glue and press firmly onto the glass lining up the edges of the brackets with the marks on the glass. Let the glue dry completely before you install the glass back into your vx

